



PN08

1. PN08

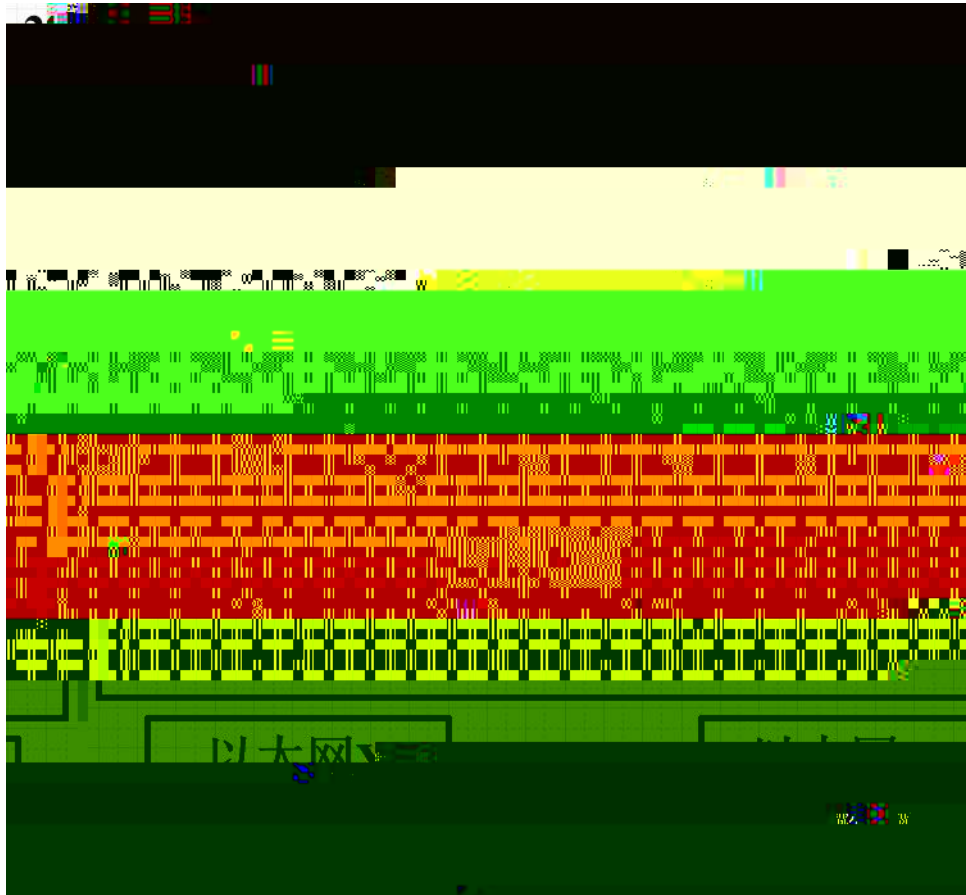


2.

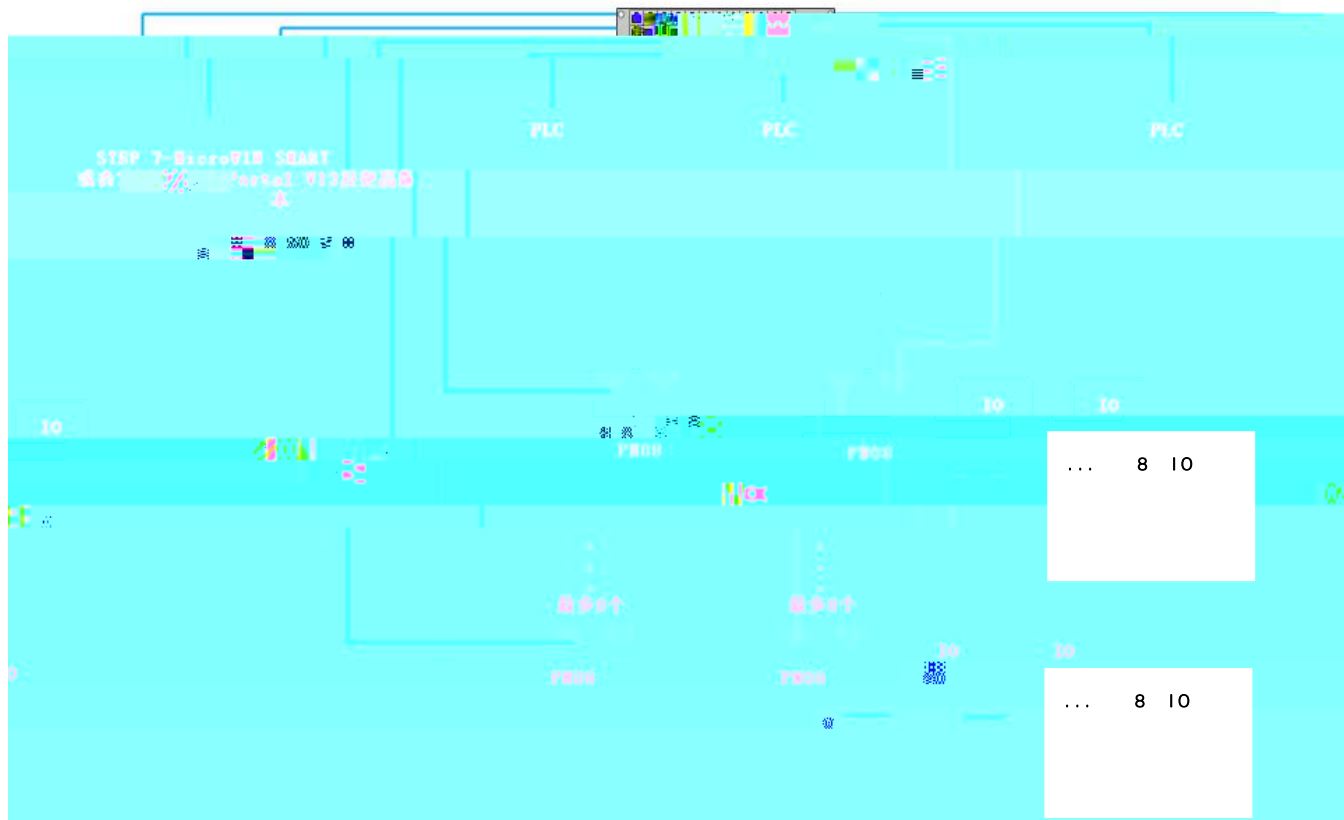


3. GSMDL



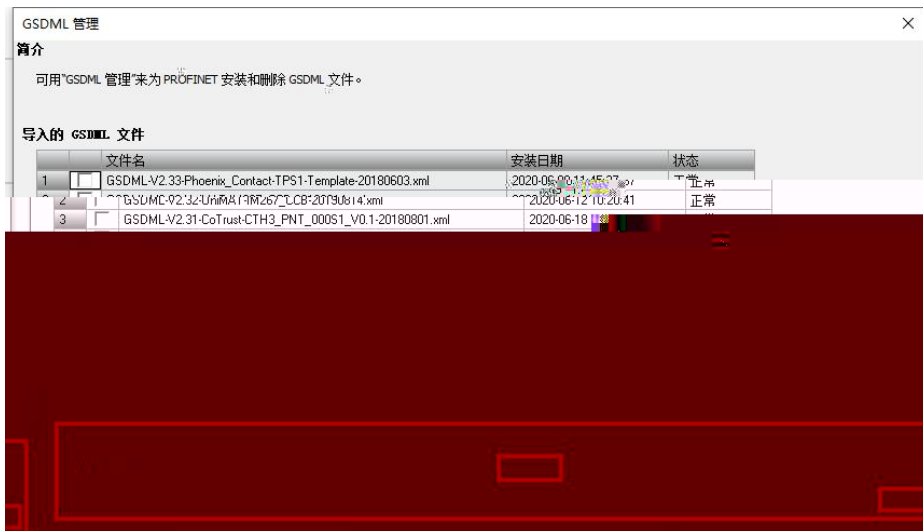


GSDML-V2.32-Huceen-PN08_V0.1-20200330

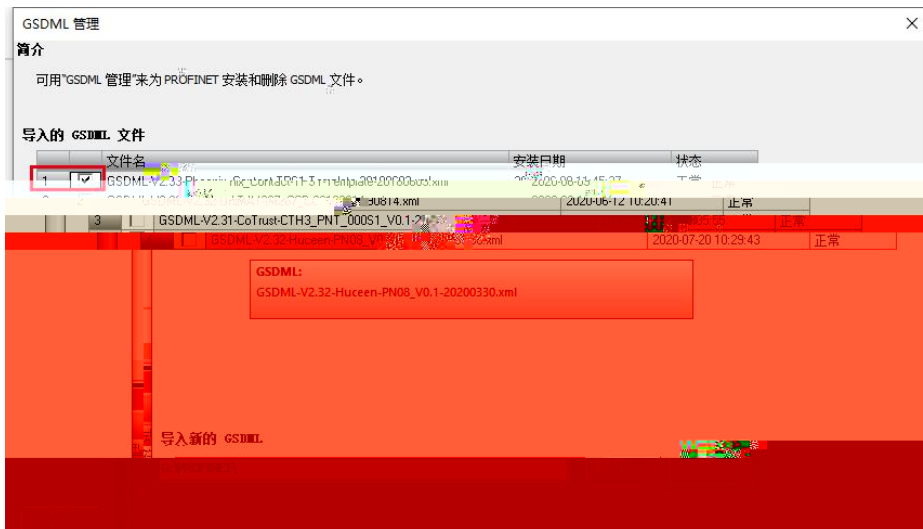


PROFI NET

4. PROFI NET



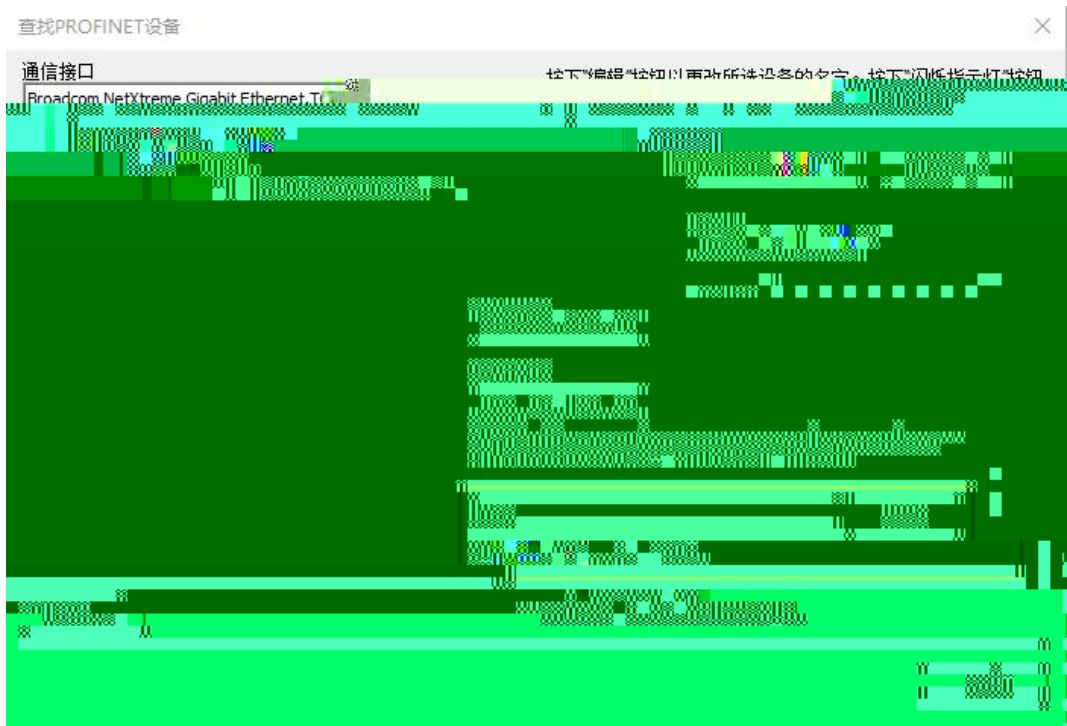


5. PROFI NET

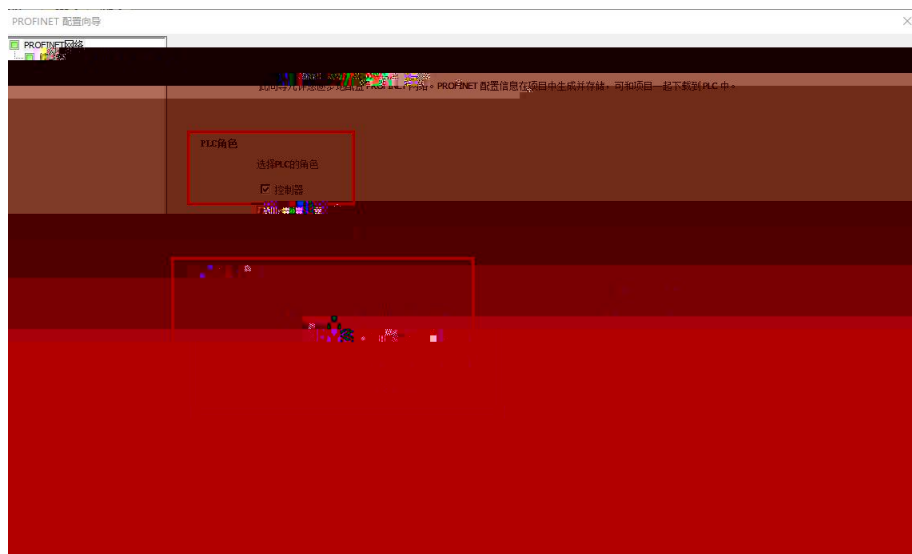

PLC

IP

PLC

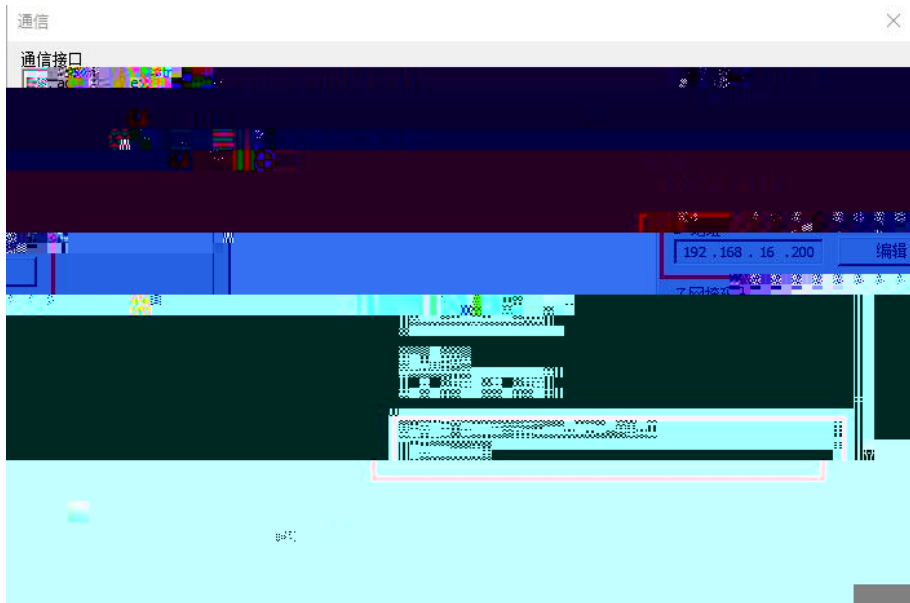


Huceen, PN08
IP (PLC)



s7-200_SMART_system_manual_zh-CHS




6.

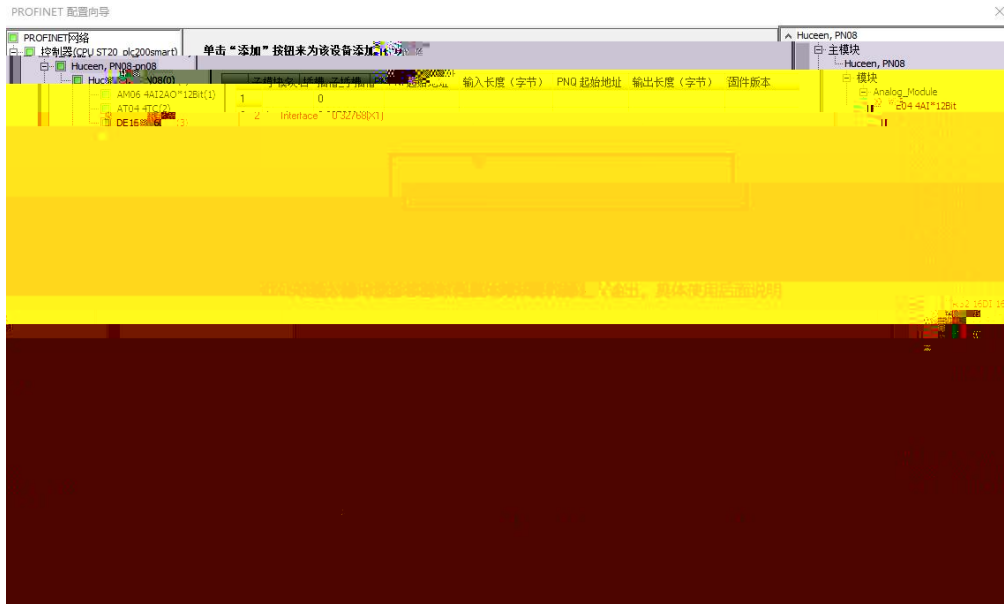

I 128.0 AM06 PN 128 I W128

地址	格式	当前值	新值
1 QW128	有符号		
2 QW130	有符号		
3 QW132	有符号		
4 QW134	有符号		
5 IW128			

7.

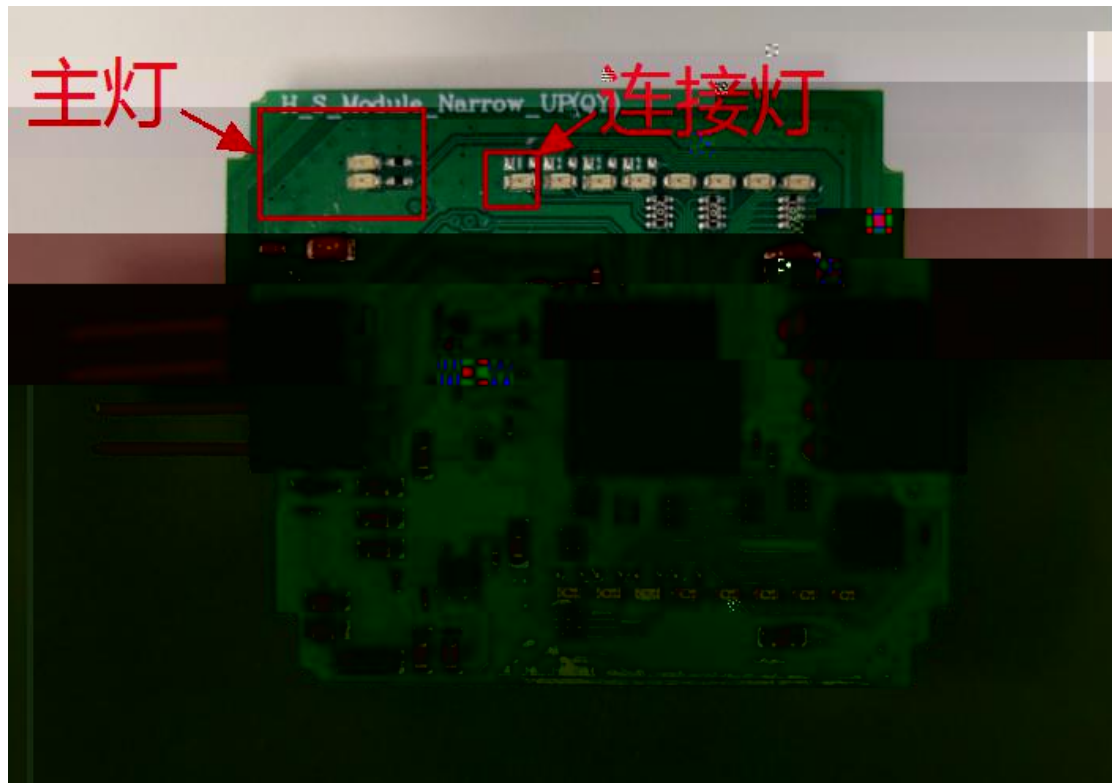

1.

-- 2 LED

1. RUN --

2. STOP --

3. ERROR --

--

(CPU)

1. --

2. --

2 ()

-- 2 LED

--

--

--

V2.0